# 2014 or NEWER Harley-Davidson®

## TM400X4ad Amplifier Tuning



**REAR INPUT LEVEL: 12:00 (1/2)** 

Matches the amp to the radio. Tells the amp where to "clip."

### FRONT INPUT LEVEL: 11:00-12:00

When using baglids or TourPak, reduce fairing speaker output by trimming level until front & rear are equally balanced.

#### FRONT & REAR EQUALIZER: MIN

Adds bass & treble to enclosed vehicles. Not used on motorcycles.

#### INPUT SWITCH: 2CH

Number of inputs to feed amp. Flashing radio only allows 2-ch output from radio.

Boom!™Box Standard 4.3

Boom!™Box Premium 6.5GT





RADIO FLASH REQUIRED "2-speaker 1-amp upper fairing"

**REMOTE TURN-ON REQUIRED** 



## **CROSSOVER FREQUENCY: 80Hz**

Tells amp what frequencies to pass. Motorcycles use this as a "bass blocker" to prevent subwoofer frequencies from damaging fairing and baglid speakers. (works with HP/AP/LP switch)

## CROSSOVER SWITCH: HP (High-Pass)

Type of crossover needed. (works with crossover frequency dial)

[HP (High-Pass) allows frequencies above to pass] [AP (All-Pass) allows all frequencies to pass] [LP (Low-Pass) allows frequencies below to pass]